



NOTES:

1. ALL MANHOLE FRAMES AND COVERS SHALL BE DEWEY BROTHERS, INC. MH-RCR-3000W IN NON-PAVED AREAS AND MH-RCR-3000EC WT IN PAVED AREAS.
2. STEPS TO BE VERTICALLY ALIGNED.
3. THE ENTIRE MANHOLE STRUCTURE INCLUDING FRAME AND COVER SHALL BE INSTALLED BEFORE CUTTING THE TOP OF THE SEWER PIPE IN THE MANHOLE. PSA PERSONNEL TO BE PRESENT DURING INSTALLATION.
4. THE FRAME AND COVER SHALL BE PROPERLY ALIGNED WITH THE 2 FOOT OPENING OF THE MANHOLE STRUCTURE AND BOLTED IN PLACE.
5. RISER AND OTHER SECTIONS SHALL NOT BE INSTALLED FOR A MINIMUM OF 24 HOURS AFTER POURING OF BASE, BENCH, & INVERT.

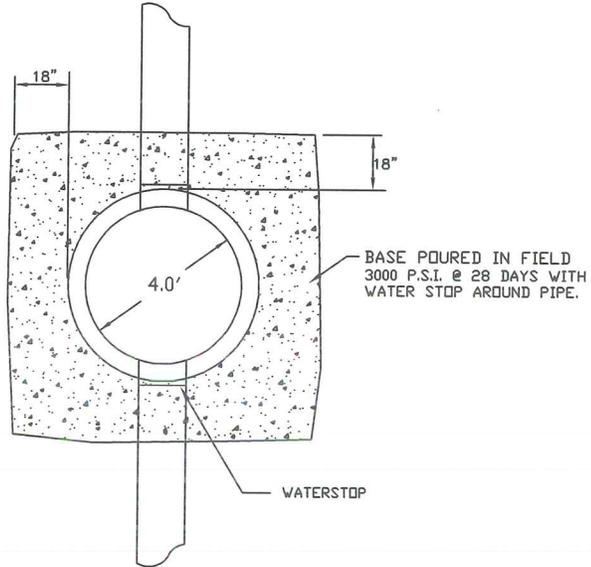

SECTION A-A

INVERTS WILL BE THE SAME SIZE AS THE PIPE AND TESTING EQUIPMENT.

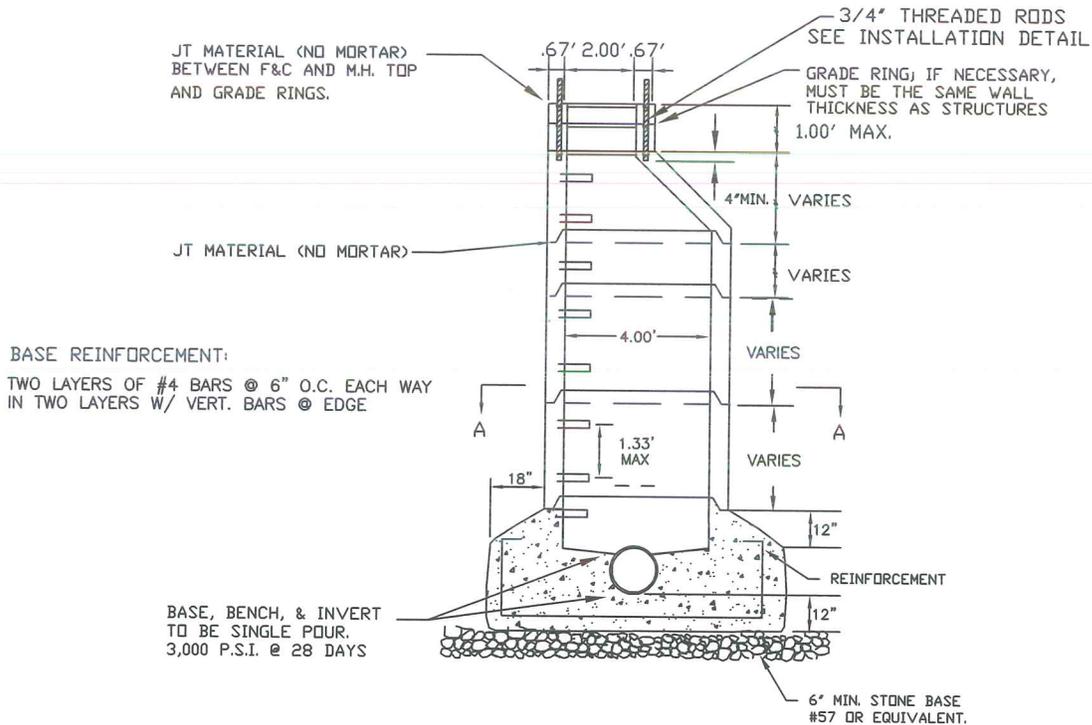

REVISIONS

NO.	DATE		
ORIGINAL	9/30/06		

STRADDLE MANHOLE  
 FOR PIPE 15"  
 OR SMALLER

DRAWING  
 S-02